

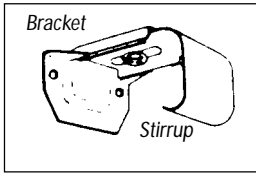


Cord Draw Fitting Instructions

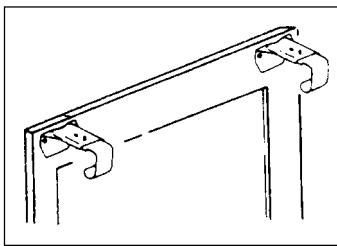

IMPORTANT


NOTE: There are two types of brackets supplied for inside and outside track sections. Stirrups marked INNER fit small track sections. Stirrups marked OUTER fit large track sections.

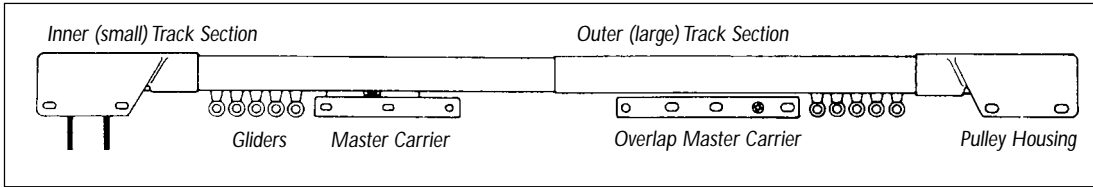

NOTE: Check that brackets are correctly positioned for respective track sections.

6 FOR RIGHT HAND

DRAW: Unhook cord from lower groove of master carrier then carefully pull cord out through right hand pulley housing. Relock cord on master carrier as per step 4.

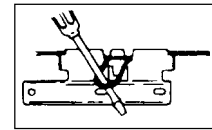

7 ADJUSTING CORD LENGTH: If the cord is too long, pull knot on overlap master carrier out, pull cord to desired length, make new knot and cut off excess cord. Reposition cord on overlap master carrier as original.

8 CONVERSION TO ONE-WAY DRAW:

RIGHT HAND CONVERSION:
(Drapes drawn from left to right)

1. Lay track face down on the floor.
2. Pull track apart at the centre.
3. Unhook cord from master carrier and allow to drop inside track. Then remove master carrier from the track.
4. Remove gliders from the right hand section of the track. Reinsert these gliders through the track cut out at the left hand end.
5. Rejoin the track at the centre then pull the cord through to hang from the left hand end.


6. Your track is now ready to install (as above)

LEFT HAND CONVERSION:
(Drapes drawn from right to left)

1. Lay track face down on the floor.
2. Pull track apart at the centre.
3. Unhook cord from master carrier and allow to drop inside track. Then remove master carrier from the track.
4. Remove gliders from the left hand section of the track. Reinsert these gliders through the track cut out at the right hand end.
5. Rejoin the track at the centre.
6. Change the overlap arm to face the otherway.
7. Your track is now ready to install (as above)


1 Screw brackets to wall or architrave. (Track will extend up to 150 mm beyond last bracket if required)

2 Expand track to size required. Twist and snap tracks into stirrups.

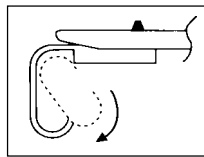


NOTE: Ensure that stirrups are correctly attached to respective track sections


3 For ceiling or pelmet fitting discard bracket and snap stirrups onto track then screw stirrups and pulley housing directly upwards.

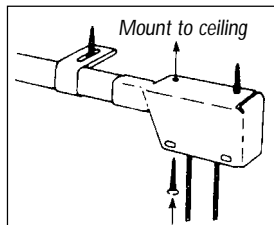

4 Pull cord until overlap master carrier (the one with the knot) moves to one end. Holding cord taut, slip master carrier to opposite end and lock by twisting cord as shown.

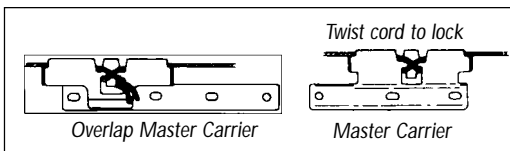

5 Pull cord to bring master carriers together at centre of track. Hang cord weight to tension cords. To attach cord weight roll rubber ring down, loop cord under roller and return rubber ring into position. Your curtains are now ready to hang. Begin at master carriers and work toward the end. Add or remove extra gliders via notch at ends of track.



NOTE: The long-term efficiency of all tracks can be improved by a light application of a silicon based liquid polish or similar oil to the running edge.

DOUBLETRACKS:

Double track systems may be assembled using brackets available on request.